an EefaCo. Store
1-877-275-9111

EnviroMate PRONTO P7

PORTABLE STEAM CLEANING & GARMENT CARE SYSTEM
SYSTÈME DE NETTOYAGE À VAPEUR PORTABLE & PROTECTION DES VÊTEMENTS
LIMPIADOR A VAPOR PORTÁTIL & SISTEMA DE CUIDADO DE VESTIMENTA

RELIABLE

INSTRUCTION MANUAL
GUIDE D'UTILISATION
MANUAL DE INSTRUCCIONES

an EefaCo. Store
1-877-275-9111

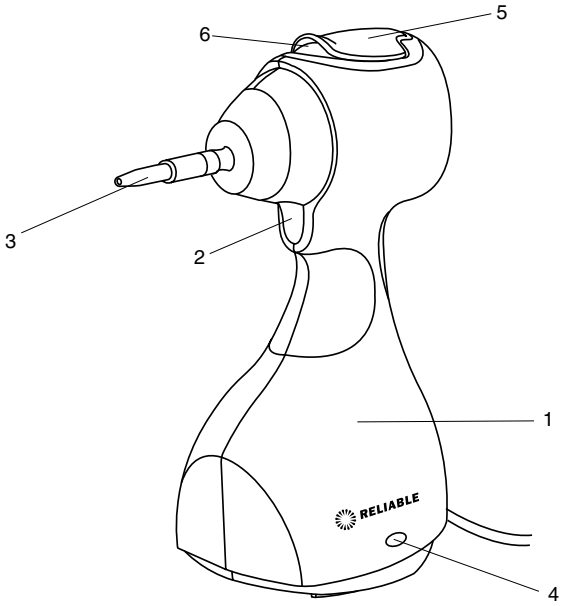

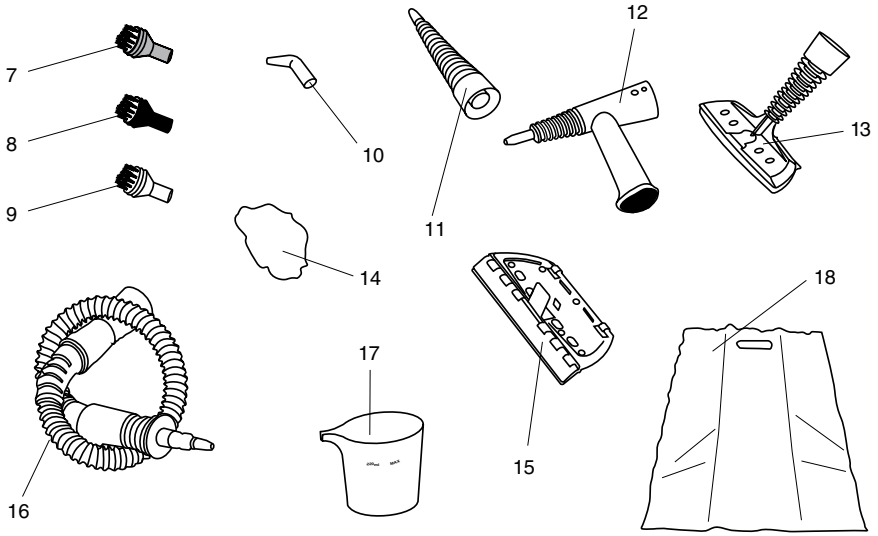

an EefaCo. Store
1-877-275-9111

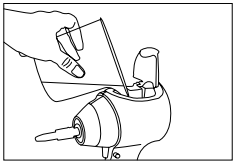
Fig. 1

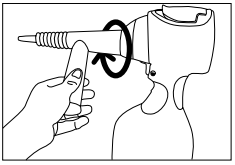
Fig. 3

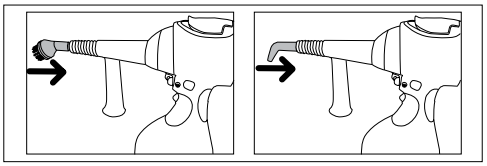
Fig. 4

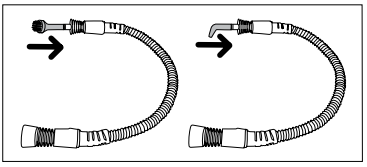
Fig. 5

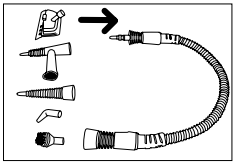
Fig. 6

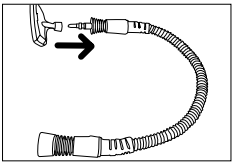
Fig. 7

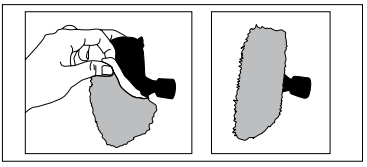
Fig. 8

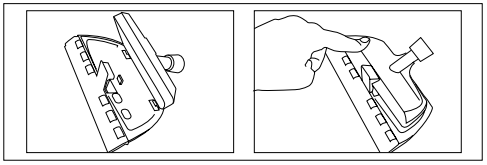
Fig. 11

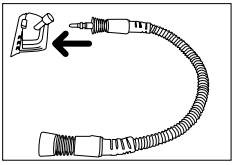
Fig. 12

WARNING: RED SAFETY PIN MUST BE UP AND CLEARLY VISIBLE BEFORE USING (AFTER WATER HAS BEEN ADDED AND PILOT LIGHT TURNS OFF).

AVERTISSEMENT : LA GOUPILLE ROUGE DE SÉCURITÉ DOIT ÊTRE DIRIGÉE VERS LE HAUT ET CLAIREMENT VISIBLE AVANT TOUTE UTILISATION (APRÈS AVOIR AJOUTÉ DE L'EAU ET APRÈS EXTINCTION DE LA VEILLEUSE)

ADVERTENCIA: EL PERNO DE SEGURIDAD ROJO DEBE ESTAR PARA ARRIBA Y CLARAMENTE VISIBLE ANTES DE USAR (DESPUÉS DE AGREGAR EL AGUA Y DE APAGAR LA LUZ PILOTO).

an EefaCo. Store
1-877-275-9111

CONGRATULATIONS

We would like to thank you and congratulate you for purchasing the EnviroMate Pronto P7 portable steam cleaning/fabric steaming system from Reliable Corporation. With its unique Comfort Safety feature, and powerful 4 bar steam pressure you will be able to obtain impressive results from such a small, compact unit.

For your safety and to fully enjoy the advantages of this product, please take a few minutes to read all the important safe-guards and care instructions. Keep this manual handy and review the product warranty card for your reference.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

When using your new steam cleaner/fabric steamer basic safety precautions should always be followed, including the following:

1. Fill the tank with (at most) with one measure of the water beaker provided. Do not add anything to the water including chemicals, cologne, detergent and so on. This may seriously damage the appliance and will void the warranty.
2. Do not use the appliance without water in the tank. If it stops producing steam, this means that the water tank is empty. Unplug the appliance, and check that the “Comfort Safety” system full indicator is not red (6). Then fill the tank with one measure of water from the beaker, close the lid of the “Comfort Safety” system (5) and plug the unit back into the wall outlet.
3. Warning: Always unplug the appliance from the wall outlet before refilling the tank and check that the “Comfort Safety” system full indicator (6) is not red before filling the tank.
4. Always check that the surfaces, objects and fabrics to be treated are resistant to or compatible with high temperature steam. We recommend checking the manufacturers instructions and carrying out a test on a hidden area or a sample before using.
5. If you use the flexible pipe, point the initial flow from the steam cleaner/fabric steamer into a container in order to get rid of steam that has condensed in the pipe.
6. Do not lift the steam cleaner/fabric steamer at more than 45° from the vertical during use, as boiling water could come out with the steam.
7. Never point the steam jet at persons, animals or at appliances containing electrical parts.
8. Caution: the accessories will heat up during use. Take caution when removing them.
9. Only use the measuring beaker to fill the water tank.
10. To protect against a risk of electric shock, do not immerse the steam cleaner/fabric steamer in water or other liquids, nor use with wet hands.
11. Never yank the cord to disconnect from the outlet. Instead, grasp the plug and pull to disconnect.
12. Do not allow the cord to touch hot surfaces. Let the steam cleaner/fabric steamer cool completely before putting away.
13. It is always recommended to disconnect the steam cleaner/fabric steamer from the electrical outlet when filling with water or emptying. It should also be disconnected when not in use.

14. Do not operate the steam cleaner/fabric steamer with a damaged cord or if the steamer has been dropped or damaged. To avoid the risk of an electric shock, do not disassemble the product. Take it to a qualified service depot for examination and repair. Incorrect reassembly can cause a risk of electric shock when the steamer is used.
15. Close supervision is necessary for any appliance being used near children. Do not leave the steam cleaner/fabric steamer unattended while connected.
16. Do not allow children to use this appliance.
17. Burns can occur from touching hot parts, hot water, or steam. Always take caution when there is hot water in the reservoir.
18. This product is designed for home use, not commercial use.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 15-amp cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE

ATTENTION

- Before using your EnviroMate Pronto P7, remove all paper or plastic bags, plastic sheets, cards and possible stickers that may be on the outside or inside of the appliance that acted as handling protection or sales promotion material.
- Do not plug it in without checking that the voltage of the steam cleaner/ fabric steamer is the same as your home power.
- Do not spray “vertical” steam on a garment hanging in the wardrobe or on a person. Vertical ironing (steaming) must be done with the garment on a hanger and away from people or animals.
- Keep the steam cleaner/fabric steamer in an upright position during storage, set on a stable surface.
- We recommend that you empty the water tank if you are not going to use the appliance for an extended period of time.
- This product is not for use by persons (including children) whose physical, sensorial or mental capacities are impaired, or who lack sufficient experience or knowledge, unless they have been supervised or instructed in the use of the appliance by a person responsible for their safety.

IMPORTANT: When you want to dispose of the appliance, NEVER throw it in the garbage. Instead, go to your closest recycling station or waste collection centre for subsequent disposal. In this way, you will be contributing to looking after the environment.

MAIN COMPONENTS

1. Main body of the appliance
2. Steam button
3. Accessory base
4. Pilot light
5. “Comfort Safety” system reservoir lid
6. “Comfort Safety” system full indicator

ACCESSORIES

7. Brass brush
8. Nylon brush (black)
9. Nylon brush (white)
10. Angle nozzle
11. Taper nozzle
12. Taper nozzle with handle
13. Fabric (window) accessory
14. Cloth for fabrics (3)
15. Window cleaning blade
16. Flexible pipe
17. Water beaker
18. Accessory bag

an EefaCo. Store
1-877-275-9111

FILLING THE RESERVOIR BEFORE USE

- Make sure that the appliance is *unplugged*.
- Open the lid of the “Comfort Safety” System (5), check that the “Comfort Safety” system full indicator/red pin (6) is NOT visible, fill the reservoir with 1 beaker (17) (Fig.1). Remember that the water level should not exceed the maximum marker on the beaker.
- Close the lid of the “Comfort Safety” system (5).

> IMPORTANT! For the unit to function:
> - The blue lid for the “Comfort Safety” system must be CLOSED.
> - Red safety pin must be visible after water has been added and pilot light turns off.

USER INSTRUCTIONS

- Attach the desired cleaning accessory and plug in the appliance.
- The pilot light (4) will come on indicating that the appliance is plugged in.
- When the steam cleaner/fabric steamer has the pressure required to operate, the pilot light (4) will go off indicating that you can start to use it. This operation will take approximately 2 minutes. During use, the pilot light will switch on and off, indicating that the steamer is recovering the necessary pressure.
- Press the steam control (2) to obtain steam.
- We recommend pressing the control (2) repeatedly for short bursts rather than just a few times for longer periods, so as to maintain pressure in the boiler and increase the performance of the steam.
- When you finish using the steam cleaner/fabric steamer, unplug it and wait for it to cool down before removing the accessories.
- We recommend that you empty the water tank if you are not going to use the appliance again for an extended period of time.

an EefaCo. Store
1-877-275-9111

ACCESSORIES

TAPER NOZZLE (11)

- Insert the taper nozzle (11) in the accessory base (3) by lining up the lugs on the taper nozzle with the holes in the base (3) and turn it clockwise (Fig. 3).

NYLON BRUSH (8,9), BRASS BRUSH (7) AND ANGLE NOZZLE (10)

- Attach these accessories by pushing them as far as they will go onto the taper nozzle (11), taper nozzle with handle (12) or flexible pipe (16).
- For items that are particularly prone to scratches, it is best to use the nozzle without a brush. For all other areas, start with the nylon brush (least abrasive) and carefully work your way up to the brass. It is always better to use care when using the brushes to prevent damage or scratching.
- The use of the steam nozzle alone is particularly good for cleaning and degreasing many working surfaces, ventilation hoods, see through oven doors, ventilation grating, kitchen furniture, stainless steel or enamel sinks, hand-basins, bath-tubs, water taps (to remove scale and water residue), doors, metal frames, car wheel rims, pet areas etc.
- The nylon brush, because of its softness, is ideal for removing the dirt in grout, sinks and other surfaces where you need some light scrubbing action. Be careful not to scratch the surface.
- Tougher cleaning jobs may require the use of the brass brush that is supplied. Please make sure you are careful that it does not scratch the surface with this tool. Brass is tougher than nylon, but softer than stainless steel. For surfaces (grout for example) where the dirt is not being properly lifted with the nylon brush, carefully using the brass brush may give the best results.
- When using the steam nozzle with or without the brushes, you will need a cloth to wipe up the moisture and dirt that has been lifted through cleaning.

FLEXIBLE PIPE (16)

- If you want to reach hard to access places or the area to be cleaned is too far away, use the flexible hose.
- Attach the pipe to the appliance in the way explained for attaching the taper nozzle (11).
- You can add the following accessories to the flexible pipe, on its flat side: nylon and brass brushes (7,8,9), angle nozzle (10), taper nozzle (11), taper nozzle with handle (12) fabric accessory (13), and window-cleaning accessory (15).

an EefaCo. Store
1-877-275-9111

ACCESSORY FOR CLEANING UPHOLSTERY AND FABRICS (13–14)

- Use these accessories for cleaning furniture, sofas, rugs, clothing, and so on.
- Attach this accessory to the flexible pipe (16) or to the taper nozzle (11) then to the machine (3).
- Place a cloth for fabrics (14) on the fabric accessory (13) when cleaning delicate surfaces such as sofas, armchairs, rugs, curtains, freshening garments and vertical steaming (Fig. 8).
- High-temperature steam allows you to remove wrinkles and freshen up garments.

WINDOW-CLEANING ACCESSORY (15)

- Use this accessory for cleaning windows, mirrors and stainless-steel surfaces.
- You can attach the accessory for cleaning windows and mirrors (15) to the fabric accessory. To attach it, insert the lugs on the window-cleaning accessory into the hooks in the fabric-cleaning accessory and press downwards until the central lug locks into place and you hear a click. (Fig. 11).
- Attach this accessory to the flexible pipe (16) or directly to the machine (3).

FILLING THE RESERVOIR DURING USE

- If you are using the steam cleaner/fabric steamer and it ceases to produce steam, it means that the tank is empty.
- To fill the tank again, proceed as follows:
  - *Unplug the appliance.*
  - *IMPORTANT NOTICE: Never refill the water tank with the appliance plugged into the wall outlet.*
  - *Open the lid of the "Comfort Safety" system (5).*
  - *Check that the "Comfort Safety" system indicator/pin is not red (6). If the "Comfort Safety" system indicator/red pin is visible, hold down the steam button (2) until no more steam comes out.*
  - *Pour in one measure of the supplied beaker (17).*
  - *Close the lid of the "Comfort Safety" system (5).*
  - *Plug in the steam cleaner/fabric steamer and wait for the pilot light to go off, telling you that the appliance is ready for use.*

an EefaCo. Store
1-877-275-9111

CLEANING AND MAINTENANCE

- Unplug the appliance.
- Press the steam button (2) to let all the steam out.
- Open the lid of the “Comfort Safety” system (5).
- When the red “Comfort Safety” system full indicator (6) switches off, pour the water out of the tank by tilting the appliance.
- Wait for the steam cleaner/fabric steamer to cool down before proceeding to clean it.
- Flush out the reservoir to remove all traces of scale.
- Clean the accessories with soapy water.
- NEVER immerse the main body in water.
- Store the steam cleaner/fabric steamer in a cool dry place.

NEVER USE VINEGAR OR OTHER DESCALING SUBSTANCES.

WE RECOMMEND THAT YOU CLEAN THE TANK ONCE AFTER EVERY FIFTEEN USES, OR WHEN IT IS GOING TO REMAIN UNUSED FOR A PROLONGED PERIOD OF TIME.

REPLACEMENTS

EP7A30N	Nylon brush
EP7A30NW	Nylon brush (white)
EP7A30B	Brass brush
EP7ACLOTH	Fabric cloth

an EefaCo. Store
1-877-275-9111

RELIABLE

Reliable Corporation (“Reliable”) warrants to original purchaser of its products that every product sold by Reliable (a “Reliable Product”) is free from defects in material and workmanship for a period of one year from the date of purchase, if properly used and maintained. Subject to the conditions and limitations set forth below, Reliable will either repair or replace any part of a Reliable Product that proves defective by reason of improper workmanship or materials. If the defective Reliable Product is no longer available and cannot be repaired effectively or replaced with an identical model, Reliable shall replace the defective Reliable Product with a current Reliable Product of equal or greater value. Repaired parts or replacement products will be provided by Reliable on an exchange basis, and will be either new or refurbished to be functionally equivalent to new. If Reliable is unable to repair or replace a Reliable Product, it will refund the current value of that Reliable Product at the time the warranty claim is made.

This limited warranty does not cover any damage to a Reliable Product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or envsteamermental conditions, wear and tear resulting from normal use of the product, or any unauthorized disassembly, repair, or modification. This limited warranty does not extend to any indirect, consequential or incidental damages that may be suffered by a user or from the use of a Reliable Product, including without limitation, any liability for third party claims for damage, and is limited to the amount paid by the original purchaser Reliable Product with respect to which this limited warranty protection applies. This limited warranty does not apply with respect to products that have been altered or which are missing serial numbers or for products not purchased directly from Reliable or a dealer authorized by us to sell Reliable Products.

This limited warranty is the only warranty that applies to any Reliable Product, supersedes any and all terms that may be contained in any other document or purchase order and may not be altered or amended except expressly in writing by Reliable.